




Setting a start address with Jump-Start

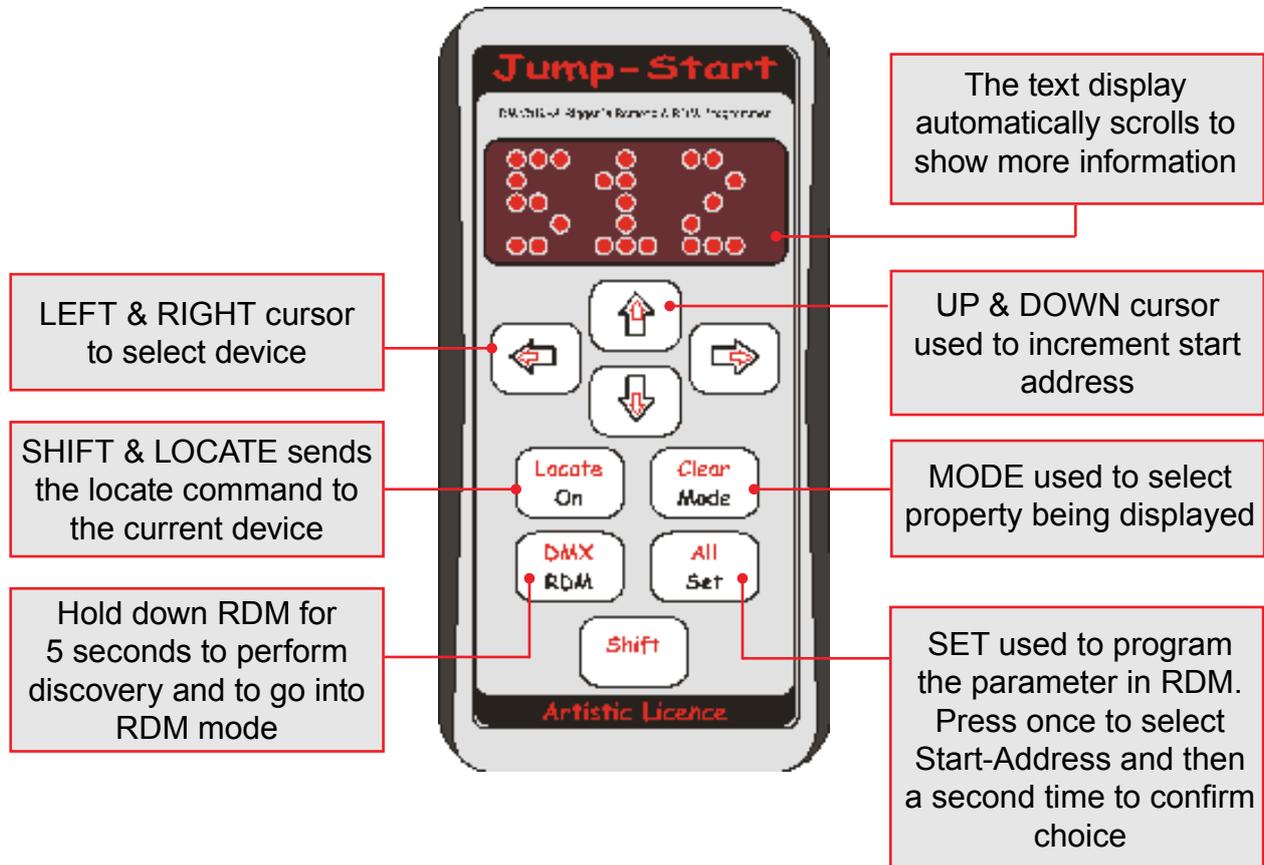

Procedure

- 1) Connect the Jump-Start to the RDM device
- 2) Turn on the Jump-Start by pressing the ON button
- 3) Turn on the product
- 4) Hold down the RDM button for approximately 5 seconds
 - This will force the Jump-Start to do a discovery. Once completed it will report how many devices it has found. It will then automatically start with device 1.
 - Note: Jump-Start will not update its device list every time a new RDM device is connected. It will remain with the same set of devices found in its previous discovery. A new discovery must be forced again by pressing RDM button.
- 5) Use the LEFT & RIGHT arrow keys to select the device

(continued on the next page...)



Procedure (continued)

- 6) To indicate what device you have selected hold down SHIFT and press LOCATE
 - This will send a locate command to the device and it will respond according to the manufacturer's specifications. For example an LED fixture might continuously flash all LEDs.
 - Note: To turn locate off, hold down SHIFT and press LOCATE
 - Warning: All devices respond differently to this command; please read user documentation before using this function command as it might have unwanted results.
- 7) Press the MODE button until Jump-Start displays 'Start Address and Footprint'
 - Jump-Start will now display the device's current start address
 - Footprint shows how many channels the device uses
- 8) Use the UP & DOWN arrow keys to edit the start address to the required value
 - Jump-Start will then display the required start address with a trailing '?'
- 9) Press SET again to confirm the address
 - Jump-Start will now show the updated start address

Troubleshooting

Jump-Start doesn't detect any devices

- Is power supplied and data connected correctly?
- What version of RDM has the fixture implemented? Jump-Start supports both Draft V1.0 & Standard V1.0 but this is user selectable. (To change or check the setting, hold down the SET button for approximately 5 seconds to enter the Setup Menu. Then press MODE until 'RDM Version' is displayed and use the UP & DOWN keys to select either Standard or Draft. Standard is the default value).
- Do you have two devices with the same UID number?

The start address was set but it doesn't work correctly

- When programming the address was the set button pressed twice to confirm?

The start address menu option doesn't appear

- This would imply that the fixture doesn't support this option. Please refer to the fixture's documentation.